





# 2011 USBC QUEENS

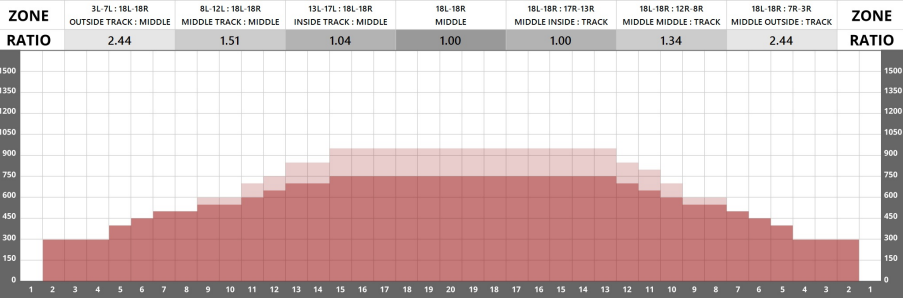

<b>DISTANCE:</b>	<b>40 FEET</b>	<b>VOLUME:</b>	<b>25.25 mL</b>
<b>RATIO:</b>	<b>2.44:1</b>	<b>FORWARD:</b>	<b>21.55 mL</b>
<b>DROP BRUSH:</b>	<b>32 FEET</b>	<b>REVERSE:</b>	<b>3.7 mL</b>
<b>TANKS:</b>	<b>KEGEL</b>	<b>PUMP:</b>	<b>50µL</b>

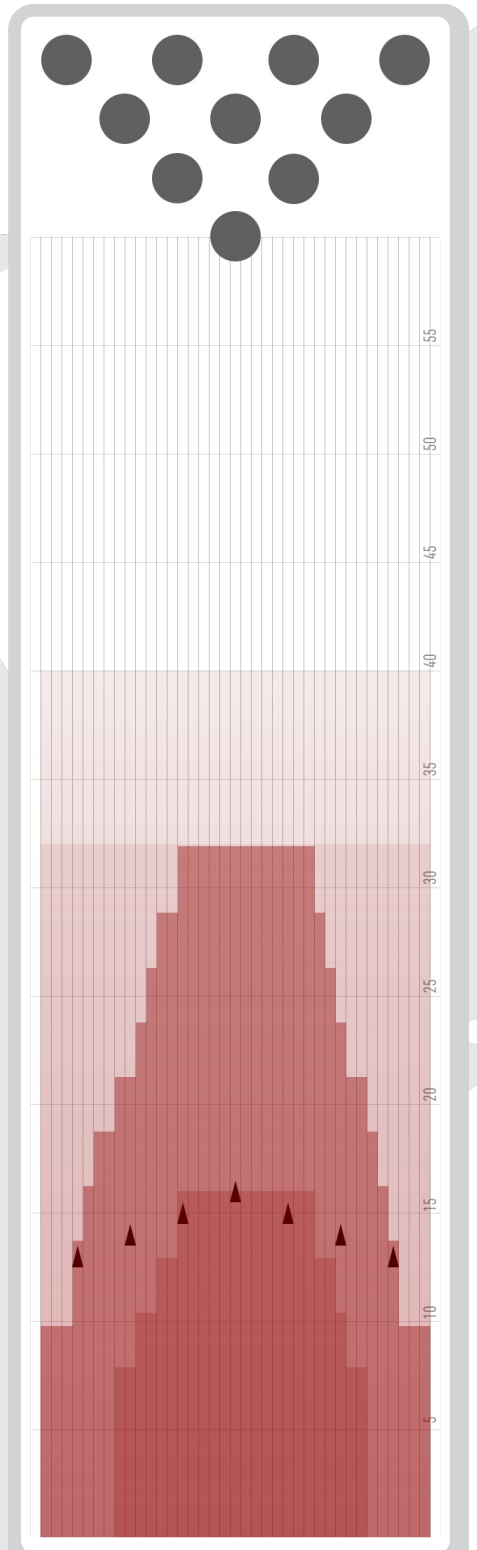

## FORWARD LOADS DATA

#	START	STOP	LOADS	MICS	SPEED	BUFF	TANK	DISTANCE	T.OIL
1	2L	2R	6	50	14	3	A - Kegel	0 → 10	11,100
2	5L	5R	2	50	14	3	A - Kegel	10 → 14	3,100
3	6L	6R	1	50	18	3	A - Kegel	14 → 16	1,450
4	7L	7R	1	50	18	3	A - Kegel	16 → 19	1,350
5	9L	8R	1	50	18	3	A - Kegel	19 → 21	1,200
6	11L	10R	1	50	18	3	A - Kegel	21 → 24	1,000
7	12L	11R	1	50	18	3	A - Kegel	24 → 26	900
8	13L	12R	1	50	18	3	A - Kegel	26 → 29	800
9	15L	13R	1	50	22	3	A - Kegel	29 → 32	650
10	2L	2R	0	50	26	3	A - Kegel	32 → 40	0

## REVERSE LOADS DATA

#	START	STOP	LOADS	MICS	SPEED	BUFF	TANK	DISTANCE	T.OIL
1	2L	2R	0	50	30	3	A - Kegel	32 → 16	0
2	15L	13R	1	50	22	3	A - Kegel	16 → 13	650
3	13L	11R	1	50	18	3	A - Kegel	13 → 10	850
4	11L	10R	1	50	18	3	A - Kegel	10 → 8	1,000
5	9L	8R	1	50	14	3	A - Kegel	8 → 6	1,200
6	2L	2R	0	50	10	3	A - Kegel	6 → 0	0

**THIS PATTERN IS DESIGNED FOR:**  
REVERSE DROP BRUSH

This pattern may require adjustments if using a lane machine that does not have these features



**KEGEL PATTERN LIBRARY APP**



[PATTERNLIBRARY.KEGEL.NET](http://PATTERNLIBRARY.KEGEL.NET)



SCAN QR CODE TO  
SHARE AND  
DOWNLOAD  
THIS PATTERN

