




START 5 AND STOP 15 CALIBRATION PATTERN



DISTANCE:	36 FEET	VOLUME:	6.6 mL
RATIO:	0.00:1	FORWARD:	6.6 mL
DROP BRUSH:	20 FEET	REVERSE:	0 mL
TANKS:	FIRE	PUMP:	60µL

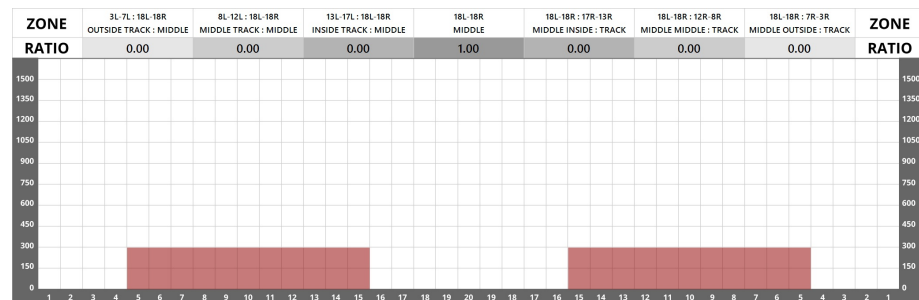

FORWARD LOADS DATA

#	START	STOP	LOADS	MICS	SPEED	BUFF	TANK	DISTANCE	T.OIL
1	15R	5R	1	60	14	500	A - FIRE	0 → 0	660
2	5L	15L	1	60	14	500	A - FIRE	0 → 2	660
3	15R	5R	1	60	14	500	A - FIRE	2 → 4	660
4	5L	15L	1	60	14	500	A - FIRE	4 → 6	660
5	15R	5R	1	60	14	500	A - FIRE	6 → 8	660
6	5L	15L	1	60	14	500	A - FIRE	8 → 10	660
7	15R	5R	1	60	14	500	A - FIRE	10 → 12	660
8	5L	15L	1	60	14	500	A - FIRE	12 → 14	660
9	15R	5R	1	60	14	500	A - FIRE	14 → 16	660
10	5L	15L	1	60	14	500	A - FIRE	16 → 18	660
11	2L	2R	0	60	22	500	A - FIRE	18 → 36	0

REVERSE LOADS DATA


#	START	STOP	LOADS	MICS	SPEED	BUFF	TANK	DISTANCE	T.OIL
1	2L	2R	0	40	18	500	A - FIRE	20 → 0	0

THIS PATTERN IS DESIGNED FOR:

REVERSE DROP BRUSH

This pattern may require adjustments if using a lane machine that does not have these features

Created Feb 23, 2026

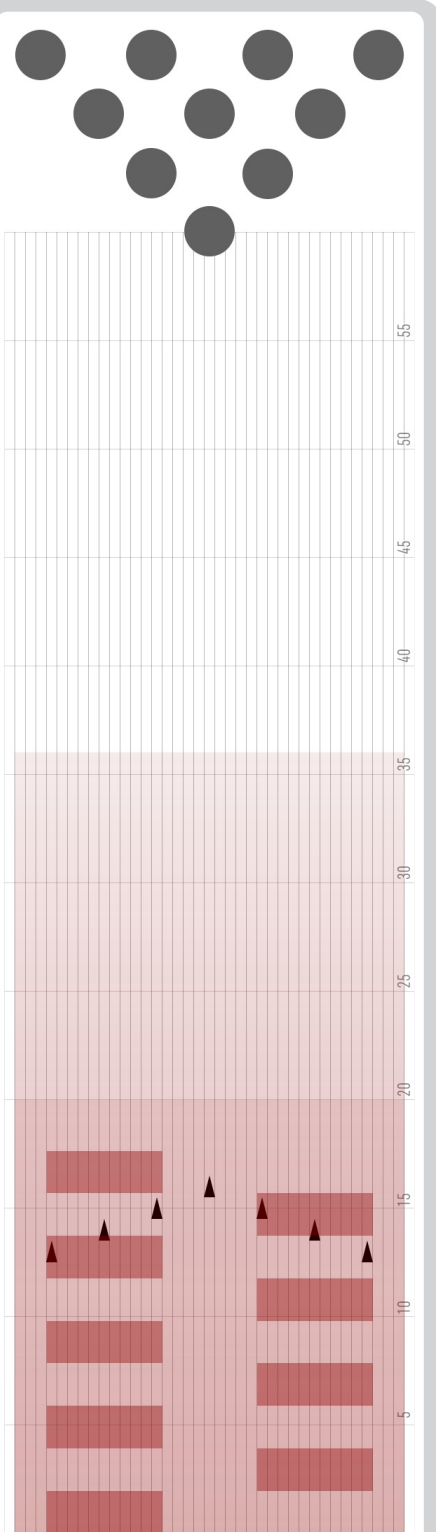

SCAN QR CODE TO
SHARE AND
DOWNLOAD
THIS PATTERN



KEGEL PATTERN LIBRARY APP



PATTERNLIBRARY.KEGEL.NET